

VECYS®

WARNING:


- Please read and understand this entire manual before attempting to operate or use the product. This will ensure you receive the most enjoyable and trouble-free operation of your new water cooler.
- After receiving the machine, please leave it alone for over 24 hours on a flat surface and then start up the machine.

**WELCOME TO GET SUPPORT
FROM US**

VECYS®

**SLUSHIE MACHINE
INSTRUCTION MANUAL**

IMPORTANT: READ CAREFULLY, RETAIN FOR FUTURE REFERENCE. MANUAL MUST BE READ BEFORE OPERATING!

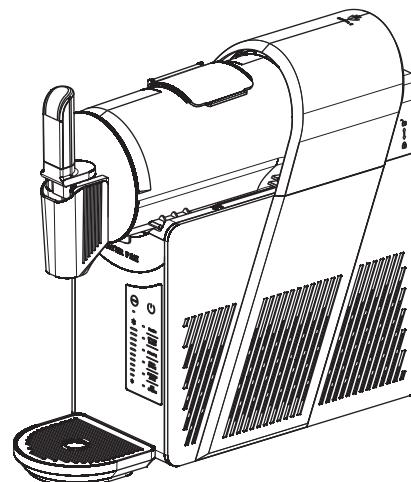

Model: SL15

CE CB 

Contents

Important Precautions.....	03
Machine Components.....	04
Control Panel Introduction.....	05
Making Smoothies.....	06
Disassembly & Parts Cleaning.....	09
Circuit Diagram.....	10
Maintenance.....	10
Common Problems & Solutions.....	11
Warranty.....	12
Contact Customer Service.....	13

Product Features

1. Multi-functional, suitable for various recipes like smoothies, alcoholic drinks, coffee, milkshakes, juice, ice cream, etc.
2. Fast freezing, avoiding long waits.
3. Fashionable and aesthetically pleasing design.
4. Easy installation and disassembly for convenient cleaning.
5. Intelligent mixing for a smooth texture.
6. Adjustable hardness levels to customize your preferred taste.
7. Quiet operation, energy saving, and power efficient.

Important Precautions

 **WARNING:** To reduce the risk of fire, electric shock, or injury to persons or objects, please adhere to these basic safety precautions.

- Carefully observe and follow all warnings and instructions, including those related to electrical connections and moving parts that may cause user issues.
- Check all contents against the packing list to ensure you have all parts required for correct and safe operation of the device.
- Allow the machine to stand for more than 24 hours before first use.
- Do not use or operate the machine if the power cord or plug is damaged; Do not replace the power cord or related accessories by yourself.
- Use the correct power socket which must be reliably grounded, and ensure the power plug is fully inserted into the socket.
- Due to potential safety hazards under certain conditions, we strongly recommend not using extension cords.
- Do not crush or pull the power cord. The power cord should be placed where it will not be contacted and must not be immersed in water.
- This product shall not be used by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge (including children), unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not plug in or unplug the power plug with wet hands.
- This product must be installed and used correctly. Please read this manual carefully before installation.
- This product is only suitable for indoor household use (e.g., homes, hotels, bars, etc.). Do not use it outdoors.
- Do not store or use flammable gases or liquids near the machine.
- Do not store explosives (such as gasoline, accelerants, etc.) inside the machine.
- Do not allow children to use this device as a toy. Close supervision is necessary when any appliance is used near children.
- This machine is food contact safe. Operate according to the cleaning instructions covered in this manual.
- Disconnect the power supply before manual cleaning, repair, or maintenance.
- Do not clean the ice maker with flammable liquids, as this may cause fire or explosion.
- Use only attachments and accessories provided with the product or recommended by the manufacturer. The use of unrecommended attachments may cause fire, electric shock, or injury. Keep hair and clothing away from the container during operation.
- Do not remove any safety, warning, or product information labels from the product.
- Do not add frozen fruits, frozen vegetables, or ice cubes to the running machine.
- Do not add hot ingredients.
- Do not fill the container beyond the maximum fill line. Closely supervise during use.


- Pay attention to the ingredient recipe. Sugar content must be above 10%, soda content above 16%, and alcohol (wine, beer, etc.) must be between 2.8% and 16% to avoid affecting the normal use and damaging the machine.
- The smoothie machine must not be placed upside down during transportation. The tilt angle shall not exceed 45 degrees. If the machine has tipped over, it is recommended to place it upright for 2 hours before switching it on.
- Install the machine in a place avoiding direct sunlight, with a flat, dry, dust-free, and well-ventilated surface (countertop). The ambient temperature should not be higher than 32°C and keep away from heat sources.

⚠️ WARNING: The refrigerant used in the cooler is flammable.

Please follow the safety warnings below to reduce the risk of injury or property damage.


- Do not damage the refrigerant circuit during handling, installation, or operation.
- For repair services, please contact the manufacturer or qualified professional technicians.
- Leave a space of more than 150mm around the smoothie machine to ensure good ventilation.
- Dispose of the equipment according to federal and local regulations. The flammable refrigerant used requires special disposal procedures. Please contact your local authorities for the safe, environmentally friendly disposal of your appliance.

Machine Components

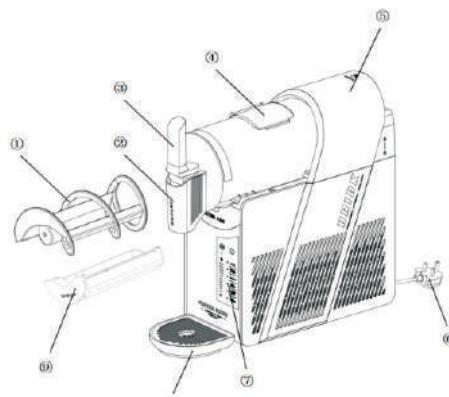

NO.	Name
1	Stirrer
2	Splash Guard
3	Handle
4	Transparent Barrel
5	Carrying Handle
6	Power Cord
7	Control Panel
8	Drip Tray
9	Residual Liquid Box


Control Panel Introduction

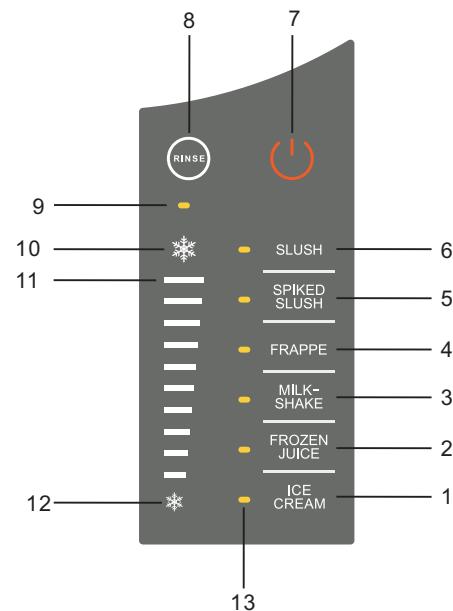


NO.	Name	Function
1	ICE CREAM Mode Button	Makes ice cream
2	FROZEN JUICE Mode Button	Makes frozen juice
3	MILK-SHAKE Mode Button	Makes milkshakes
4	FRAPPE Mode Button	Makes shaved ice
5	SPiked SLUSH Mode Button	Makes alcoholic smoothies
6	SLUSH Mode Button	Makes smoothies
7	Power Button	Controls function key on/off
8	Clean Button	Controls cleaning function
9	Indicator Light	Displays cleaning function status
10	Hardness Plus	Increases beverage hardness
11	Hardness Display Bar	Shows hardness level in the current mode
12	Hardness Minus	Decreases beverage hardness
13	Indicator Light	Displays function key on/off status

Making Slush


1. Machine Disassembly and Installation Operation:

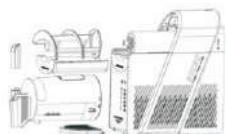


1).Check that all components are complete.

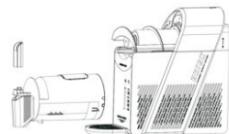

2).Assemble the drip tray, residual liquid box, and stirrer.

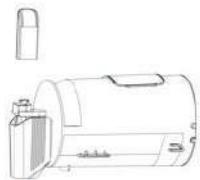


a

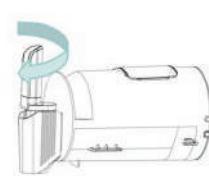

b

3).Install the ice barrel handle:As shown in Figure a, align it with the mounting holes and rotate clockwise to fix it in place, as shown in Figure b.

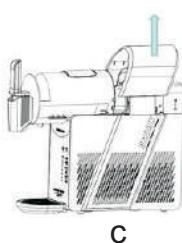

C

4).Install the ice barrel As shown in Fiaure c, lift the buckle handle to its highest point, place the ice barrel along the guide rail to the innermost position, then press the buckle handle down until you hear a click, indicating installation is complete.

2. Slushie Machine Buttons

(1) Power Button

After installation is complete and the power is connected, the buzzer will beep once, and the machine enters standby mode. Press the button shortly, the machine defaults to the smoothie function, with the hardness level defaulting to level 5.



(2) Clean Button

When the machine is in standby mode, press the button shortly, the stirrer begins to rotate for cleaning. Pressing the button during mode operation has no response; it only runs in standby mode. Independent cleaning operation will automatically stop after 20 minutes of no operation.

(3) Beverage Modes

10 levels are available for selection. Each mode automatically corresponds to the best taste temperature. If adjustment is needed, press the Hardness Plus and Hardness Minus buttons shortly.

3. Slush Making Steps

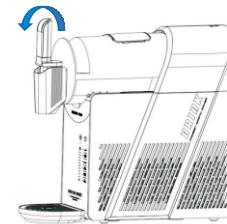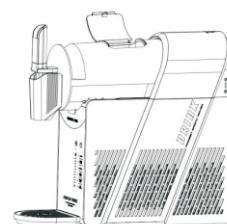

1. Connect to power, open the top lid of the ice barrel, pour in an appropriate amount of liquid, then close the lid.

2. Press the power button shortly, select the desired mode to start making the beverage.
 Note: The poured ingredients must reach the minimum scale line and be below the maximum scale line.
 3. Place a cup on the tray, pull the handle down to dispense.
 4. Release the handle, allowing it to reset to the closed position.

4. Ingredient Usage Reference

Ingredient Reference		
Mode	Hardness Level	Ingredients
Slush	5	Sugary Drinks
Spiked Slush	9	Alcoholic Beverages
Frappe	2	Coffee-based products
Milk-shake	5	Dairy products & cream drinks
Frozen Juice	1	Fresh Juice
Ice Cream	7	

Sugar Standard

Please refer to the beverage/liquid nutrition label to ensure the sugar content meets the following recommended minimum requirements:

Amount of Ingredient Added	Minimum Sugar Content
8oz (240mL)	8g
12oz (355mL)	11g
20oz (591mL)	18g

Sugar-free substitutes and artificial sweeteners cannot replace the sugar requirement.

Alcohol Standard

Please refer to the beverage/liquid nutrition label to ensure the alcohol content meets the following recommended requirements:

Amount of Ingredient Added	Maximum Alcohol Content
24oz (710mL)	4oz (120mL)
36oz (1.06L)	6oz (180mL)
48oz (1.42L)	8oz (240mL)

During freezing, alcohol (wine, beer, etc.) must be between 2.8% and 16%.

Disassembly & Parts Cleaning

Using the Cleaning Cycle to Clean the Machine

1. Drain the remaining beverage from the ice barrel.
2. Add warm water up to the maximum scale line of the ice barrel.
3. Press the Clean button  (RINSE), the stirrer will rotate.
4. After rotating for cleaning, drain the water from the barrel.
5. Repeat this operation 2-3 times until the frozen drink on the evaporator is washed away, indicating the cleaning is complete.
6. Turn off the machine.


Disassembly for Cleaning

Note: Before disassembling for cleaning, confirm the power plug is disconnected to avoid electric shock.

1. Lift the buckle handle, then remove the ice barrel, stirrer, residual liquid box, and drip tray in sequence. Rinse them clean in the sink (Do not use water temperatures exceeding 80°C).
2. Wipe the evaporator and other dirty parts with a clean, warm, damp cloth.
3. Keep all parts dry.

Motor Protection Function: If the setting is too hard or ingredients are incorrect, the frozen drink may become increasingly hard, and the stirring motor may stall, which is normal. In this case, the motor protection device will automatically stop the motor to protect the stirring motor's lifespan.

Circuit Diagram

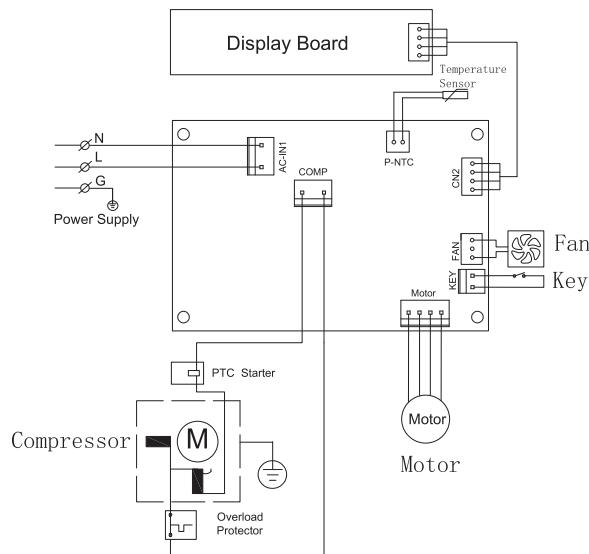

Common Problems & Solutions

NO.	Abnormal Phenomenon	Abnormal Content	Handling Method
1	Level 5 LED Flashing	System malfunction, no cooling alarm	Contact after-sales service
2	Level 6 LED Flashing	High sugar alarm	Add water to ice barrel (Water : Solution = 1:4)
3	Level 7 LED Flashing	Low sugar alarm	Add sugar to ice barrel (Sugar : Solution = 1:8)
4	Level 8 LED Flashing	Ice barrel installation abnormal	Reinstall the ice barrel to the correct state
5	Level 9 LED Flashing	Ice jam alarm	Turn off the machine, wait for the ice to melt before restarting
6	Level 10 LED Flashing	NTC signal abnormal	Contact after-sales service

Maintenance

1. After cleaning is completed, turn off the power and unplug the plug promptly.
2. After cleaning the parts, dry the surface with a clean, dry cloth before reassembly to prevent odor or mold growth.
3. When cleaning, be careful not to immerse the main body in water or pour water from the sides or back.

Warranty

30-Day Money-Back Guarantee and a limited-year-warranty

We stand proudly by our products and take pride in our customer service. We warrant that our products will be free from defects in all materials and workmanship (excluding paint and finish) for the Warranty Coverage Period described below. This warranty is extended only to the original consumer purchaser. During the Warranty Coverage Period, we will (at our sole option) replace any defective part or product covered by this warranty when provided with proof of purchase. The replacement will be without charge.

Coverage Details:

Warranty does not cover normal wear of parts or damage caused by misuse, abuse, overheating and alteration. No alterations are covered in this warranty. AQUART is not responsible for any loss due to neglectful operation. Furthermore, this warranty does not cover products damaged or rendered defective due to accident, misuse, abuse, modification, water damage, neglect, improper handling or storage, improper maintenance or installation, incorporation of third-party components or exposure to weather, natural disasters such as earthquakes, hurricanes, tornadoes, floods, lightning, fires, or failure to follow instructions for use.

ANY WARRANTIES IMPLIED BY LAW SHALL IN NO EVENT EXTEND BEYOND DURATION OF THIS EXPRESS WARRANTY. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. REPAIR OR REPLACEMENT AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY FOR ANY DEFECTIVE PRODUCT. IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY KIND ARISING OUT OF THE PURCHASE OR USE OF THIS PRODUCT, WHETHER BASED UPON CONTRACT, TORT, STATUTE OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Please keep all original sales receipts from the authorized dealer. Proof of purchase is required to obtain warranty services. Our warranty is limited to all purchases made from VECYS. If you purchased through a different retailer, please contact them directly. (Unauthorized reselling of VECYS products is prohibited.) Any parts or products returned without written authorization will be discarded without notice. To obtain warranty services submit a warranty request by mailing support@aquare.cn. We are happy to help and are available Monday-Sunday, between 9 am to 5 pm PST.

Warranty applies to the United States and Canada.

Exceptions

There is no written or implied performance warranty on AQUART products, as the manufacturer has no control over the installation, operation, cleaning or the maintenance. This warranty will not apply nor will AQUART assume responsibility if your appliance has not been installed, operated, cleaned, and maintained in strict accordance with the owner's manual. This warranty does not cover damage or breakage due to misuse, improper handling or modifications.

Neither AQUART, or authorized AQUART dealer, accepts responsibility, legal or otherwise, for the incidental or consequential damage to the property or persons resulting from the use of this product. Whether a claim is made against AQUART based on the breach of this warranty or any other type of warranty expressed or implied by law, the manufacturer shall in no event be liable for any special, indirect, consequential, or other damages of any nature whatsoever in excess of the original purchase of this product. All warranties by AQUART are set forth herein and no claim shall be made against AQUART on any warranty or representation. For more information regarding specific terms of warranty coverage, email support@aquare.cn.

Contact Customer Service

No matter what issues or questions you encounter with the product, you can contact us through the platform where you purchased the product, such as Amazon or Walmart. We will not evade responsibility and are always happy to help buyers resolve problems. (Our working hours are from 8:00 AM to 5:00 PM, Monday to Friday, Beijing Time, China. **Please note: There is a time difference between China and the United States.** Friday in the U.S. corresponds to Saturday in China. During our working hours, we will respond immediately. If it is outside our working hours, we will reply within 48 hours at the latest. Thank you for your understanding.)